


END VIEW OF CHUTE

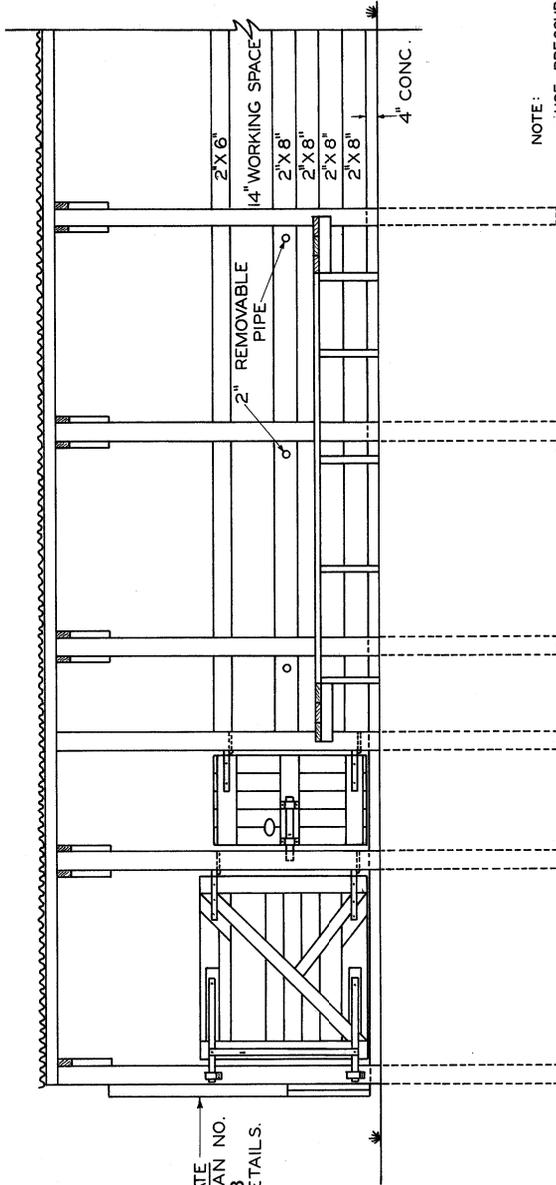


WORKING CHUTE AND PLATFORM

WALK-IN GATE


SIDE ELEVATION

NOTE:  
 ° USE PRESSURE-TREATED 2-INCH LUMBER FASTENED WITH BOLTS OR DEFORMED NAILS.  
 ° SPACE 6'-7" TOP, PRESSURE-TREATED POSTS, 6' CENTER TO CENTER, UNLESS OTHERWISE NOTED.  
 ° SET GATE AND WORKING CHUTE POSTS IN CONCRETE.


HEADGATE  
 SEE PLAN NO.  
 7241-13  
 FOR DETAILS.

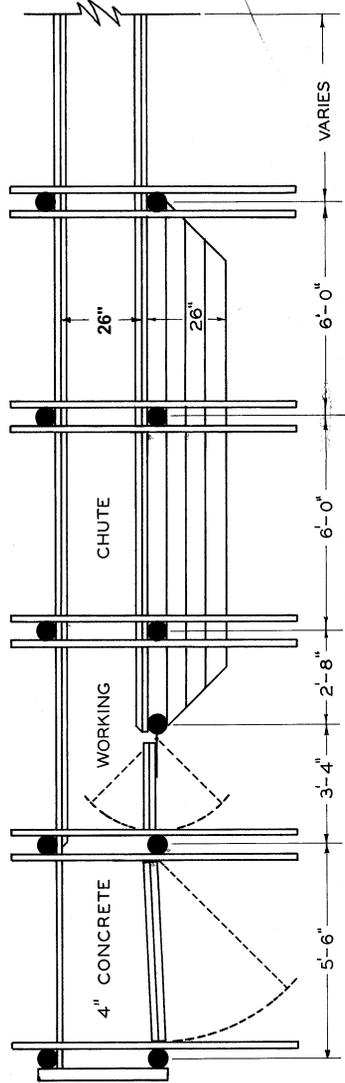


PLAN

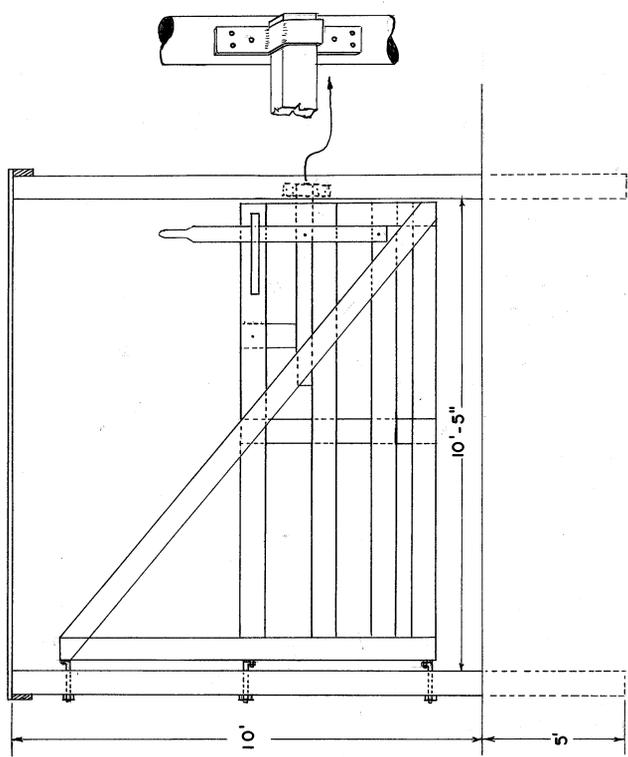

10' GATE

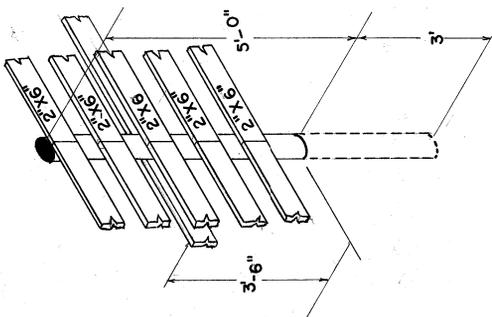


5-WIRE BARBED WIRE

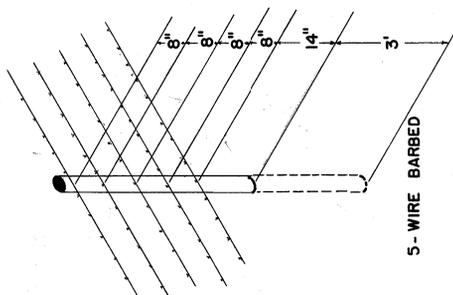


4-WIRE BARBED WIRE

LINE

FENCE DETAILS

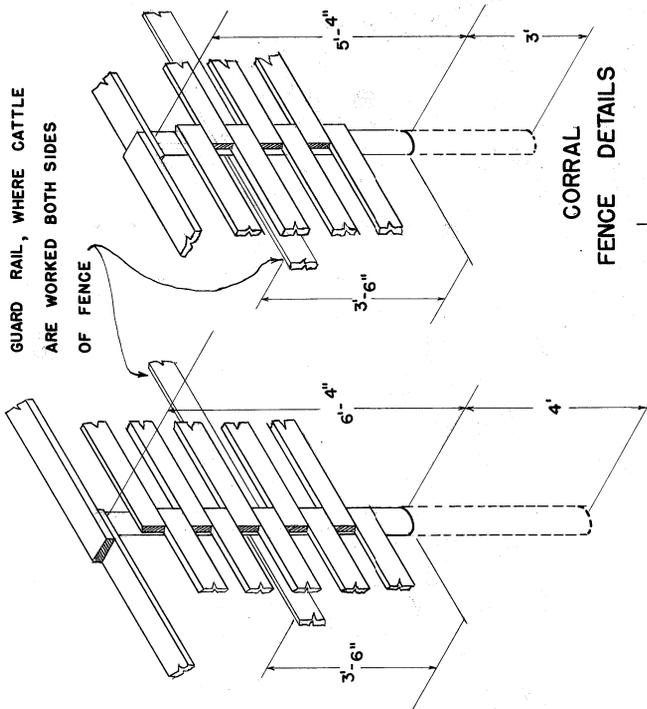

CORRAL FENCE DETAILS

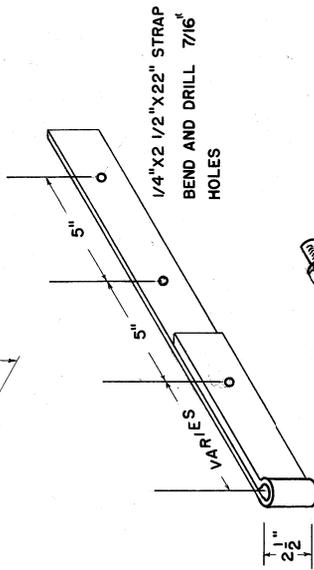

GATE HANGER